



D001127AA0

QC50 preventive maintenance plan / Plan de maintenance préventive pour QC50

QC50											
Periodicity	months	6	12	18	24	30	36	42	48	54	60
	Body of charger		C	C	C	C	C	C	C	C	C
Inside the charger			C		C		C		C		C
Screen external face		C	C	C	C	C	C	C	C	C	C
RCD / RCBO		I	I	I	I	I	I	I	I	I	I
Input terminal blocks			T		T		T		T		T
Lateral fans			I		I		I		I		I
Transformer terminals			T		T		T		T		T
Converter power terminals			T		T		T		T		T
80Amps fuses					R				R		
160Amps fuses			R		R		R		R		R
DC rack power supply fans			C		C		C		C		C
DC output cables terminal blocks			T		T		T		T		T
Type2 output cables terminal blocks			T		T		T		T		T
Type2 output socket power terminals			T		T		T		T		T
CCS cable and plug		I	I	I	I	I	I	I	I	I	I
chaDEmo cable and plug		I	I	I	I	I	I	I	I	I	I
Type2 cable and plug		I	I	I	I	I	I	I	I	I	I
Type2 socket		I	I	I	I	I	I	I	I	I	I
Earth resistance		M	M	M	M	M	M	M	M	M	M

Satellite											
Periodicity	months	6	12	18	24	30	36	42	48	54	60
	Body of unit		C	C	C	C	C	C	C	C	C
Inside the unit			C		C		C		C		C
Screen external face		C	C	C	C	C	C	C	C	C	C
RCD / RCBO		I	I	I	I	I	I	I	I	I	I
DC relay			T		T		T		T		T
DC output cables terminal blocks			T		T		T		T		T
Type2 output cables terminal blocks			T		T		T		T		T
DC input terminal blocks			T		T		T		T		T
AC input terminal blocks			T		T		T		T		T
CCS cable and plug		I	I	I	I	I	I	I	I	I	I
chaDEmo cable and plug		I	I	I	I	I	I	I	I	I	I
Type2 cable and plug		I	I	I	I	I	I	I	I	I	I
Type2 socket		I	I	I	I	I	I	I	I	I	I
Earth resistance		M	M	M	M	M	M	M	M	M	M

- I : Inspect (Verify, clean, Tighten or change if necessary)
- R : Replace
- C : Clean
- T : Tighten
- L : Lubricate
- P : Purge
- M : Measure